


1. For maximum installation durability provide a solid surface or footing.




2. Place the object in the desired place and mark the anchoring spots on the ground.




3. Drill a D=12 mm and 200+ mm deep hole for ANCHOR.200.



4. Inject chemical anchoring mass HILTI HIT-ICE or similar according to the producer's instructions.

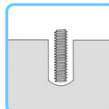

5. Insert threaded anchor ANCHOR.200 and wait till it hardens. Consult the producer for the hardening time.

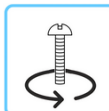

6. Secure the object to the ground with bolts included in a set with the ANCHOR.200.

ANCHOR.200 is used when the paved surface lacks adequate mounting support. In such instances, a load-bearing footing must be installed beneath the pavement. This footing typically consists of prefabricated concrete blocks or poured-in concrete.

A set of ANCHOR.200 includes:

- Threaded rod with inner thread M8x30mm, L=200 mm – 1 pcs.



- Stainless steel bolt M8x30mm A2 DIN7991 or DIN7380 – 1 pcs.



The Installation Manual has a suggestive character, with specific materials chosen by the construction executor. All measurements are approximate and are provided for informational purposes only. This Installation Manual remains subject to possible changes.